



ACRYLIC KITCHEN SINKS

Installation Care and Cleaning Guidelines

IMPORTANT

Read all instructions carefully before beginning installation of your new sink.
Eye and ear protection is always recommended while using any tool.

SELF RIM INSTALLATION

Installing your Jacuzzi Acrylic sink is relatively simple and you should be able to do it with a minimum of experience.

If this is a replacement for a sink of the same size, go directly to "Mounting your Sink to the Counter".

Measuring and Cutting Your Countertop:

1. Place the sink **UPSIDE DOWN** on the counter top and position accurately.
2. With a pencil, draw a line around the outside edge of the sink onto the countertop then remove the sink
3. Measure in 3/8" and draw new parallel lines inside the first sink outline.
4. Carefully cut out the countertop with the jigsaw on this 2nd inner line.
5. Carefully sand the edge of the cutout to remove any sharp edges and wipe with denatured alcohol.

Mounting your Sink to the Counter:

1. Attach faucets, drain assemblies and any other accessories to manufacturers' instructions
2. If this sink is replacing an existing sink then clean the counter top to remove any old sealant
3. Run a bead of silicone sealant around the bottom face of the perimeter of the sink and carefully position to secure the sink to the countertop. Clamping should not be required!
4. Wipe off excess silicone.

TOOLS AND MATERIALS

Match tools to your installation needs to complete the job

- Pencil
- Tape measure
- Jig-saw
- Sandpaper
- Cleaning materials
- Silicone adhesive sealant
- Framing square (for undermounting)
- Paper template (for undermounting)
- Board for cutting wooden template (for undermounting)
- Router (for undermounting)
- 2 bar clamps (for undermounting)
- Drill and 1/4" bit (for undermounting)
- Fastening screws 1/4" or 3/8" with washers (for undermounting)
- Screwdriver


JACUZZI ACRYLIC SINKS UNDERMOUNT INSTALLATION

PLEASE NOTE: The Halifax sink is not suitable for undermounting.

PLEASE NOTE: When using a Jacuzzi Acrylic Sink in an undermount installation, please carefully check style and size before cutting countertop. Contact your fabricator for installation requirements and proper fasteners if undermounting to granite, marble or solid surface materials other than wood.

1. Position the sink over the base unit and calculate the center of the sink in relation to the depth of the countertop. Using the framing square, draw a line on the countertop to mark the center. Calculate the center of the sink in the other direction and mark this on the countertop.
2. Decide what set back is desired. This will vary depending on the style of sink, size of bowls and over/underhang that you have chosen.
3. Make a paper template and transfer to the plywood. Draw template on the plywood and adjust template size to suit your router bit & follower. Cut template.
4. Carefully check that sink and template measurements are correct before continuing.
5. Secure template to the countertop in relation to marked pencil lines using the bar clamps. Check, and cut countertop. Make sure the router cut accurately follows the edge of the template.
6. After the hole is cut, sand and finish the cut surface as required

7. Drill holes through the deck of sink rim to give it maximum support. This should include holes in each corner and at front and rear center locations although additional holes may be drilled if necessary.
8. Clean bottom of the countertop and top flange of the sink with denatured alcohol and run a narrow bead of silicone adhesive sealant to the top edge of the bowl flange and position the bowl.
9. Position and mount the sink using appropriate screws through the holes drilled into the sink rim. Do not use excessive force to tighten the screws
10. Clean off excess silicone from the countertop and sink.

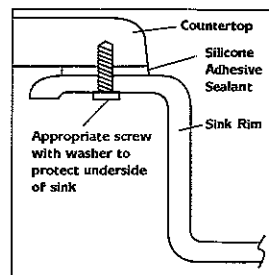

IMPORTANT NOTE: Plumbers putty **MUST** be used when installing the sink basket strainers.

WARRANTY INFORMATION – CARE & CLEANING INSTRUCTIONS

CARE & CLEANING INSTRUCTIONS

When used properly this Jacuzzi Acrylic sink should give many years of hassle free use. The durable acrylic surface will under normal kitchen conditions resist scratches and stains. Although the cast acrylic surface will not absorb stains, occasionally a residue will build up on the surface that may. Simple daily rinsing and regular cleaning with bleach will retain the 'new look shine'. An appropriate Crème Polish can be used to buff & polish any minor scratches.

However, improper use may and can damage this sink or its finish and void the warranty. Please read the following instructions carefully before using your sink.

CARE OF YOUR JACUZZI ACRYLIC SINK

- To keep your sink looking new, you should rinse thoroughly and dry with a soft towel after every use.
- Wipe a solution of bleach and water around the bowl then towel dry once a week.
- It is not necessary to use abrasive cleaners. Any residue can be removed by wiping with a cloth or sponge and liquid soap.
- Abrasive cleaners will dull the finish of the sink and void the warranty.

EXTENDED CARE OF YOUR JACUZZI ACRYLIC SINK

- Jacuzzi recommends the use of protective mats or racks in this sink. Remove and clean these before cleaning your sink to maintain their appearance.
- If knives or sharp objects are to be used in the sink always use a cutting board or sink protector.
- Residue from sponges, wet dishrags or cleaning pads may discolor and dry on the sink surface. Remove these items after use.
- Small particles of iron from steel wool pads may rust and embed themselves into the sink surface. Do not leave these around or use these on your sink. Restore surface with an appropriate Crème Polish.
- Wait until pots and contents have cooled before placing in sink. Never pour hot grease or place hot pots directly into your sink.
- REMEMBER, if you do happen to damage this sink, minor cuts or scratches can be buffed and polished to restore the finish.

LIMITED LIFETIME WARRANTY

Jacuzzi Acrylic products are warranted to be free from defects in materials and workmanship. This warranty excludes:

1. Any obligation other than replacement of defective parts, when presented to the selling distributor, together with proof of purchase, during the warranty period.
2. Any labor charges, removal and reinstallation expense, freight or postage, or any incidental or consequential damages resulting from any defective product.
3. Products classified as "accessories".
4. Normal wear and tear.

THIS WARRANTY SHALL BE VOIDED BY ANY OF THE FOLLOWING

1. Modification.
2. Improper installation, care or maintenance of the product.
3. Use of the product for any purpose or in any manner other than for which it is specifically intended.
4. Improper use and maintenance contrary to use and care instructions.

The warranty supersedes any and all other warranties, expressed or implied. The foregoing warranties are exclusive and made only to the buyer.

NO OTHER WARRANTY, WHETHER EXPRESSED, IMPLIED, OR STATUTORY INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE SHALL EXIST IN CONNECTION WITH ANY OF THE GOODS OR SERVICES SUPPLIED HEREUNDER, AND ALL SUCH WARRANTIES ARE HEREBY EXPRESSLY EXCLUDED.

No employee, agent, or other person is authorized to give any warranties on behalf of Jacuzzi in addition to or different from those herein given, or to assume for Jacuzzi any other liability in connection with any of its products except in writing which is signed by an officer of Jacuzzi expressly and intentionally giving such warranties or assuming such liability.

LIMITED WARRANTY

JACUZZI WHIRLPOOL BATH ("Jacuzzi Whirlpool Bath", "we", "us", "our"), warrants to the original consumer/purchaser for the applicable warranty period set forth below, that the products we sell are free from defects in material and workmanship, except as otherwise indicated below.

PRODUCTS	WARRANTY PERIOD
• All cast iron sink products with porcelain enamel finish.	(commences upon date originally installed for its intended purpose)
	Limited lifetime vessel warranty to the original consumer/purchaser only. The porcelain enamel finish is warranted for one (1) year.
• 1.6 gpf/6 ltr. china toilets.	Five (5) years.
• All other china products and kitchen sink accessories.	Two (2) years.
• All toilet seats.	One (1) year.

ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THESE PRODUCTS IS LIMITED IN DURATION TO THE WARRANTY PERIOD SPECIFIED ABOVE. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

This limited warranty does not cover:

- (a) damage to any products based on or resulting from improper installation or repair, misuse or abuse (including but not limited to excessive operating conditions), or alteration or adjustment other than in conformity with our specifications or instructions, whether performed by a contractor, service company or yourself;
- (b) damages resulting from failure to reasonably clean, care for or maintain a product in accordance with our instructions/recommendations; or,
- (c) any products we sell that have been moved or removed from their original installation site.

If you believe that a product fails to meet the above limited warranty, you should notify us in writing prior to expiration of the applicable warranty period set forth above at the following address: **Jacuzzi Whirlpool Bath, 2121 N. California Blvd., Suite 475, Walnut Creek, CA 94596.** Notification should include a description of the product, model number and how the product fails to meet the above warranty. Upon receipt of a written claim under this limited warranty and evidence of the date of purchase or installation, and after inspection by an authorized Jacuzzi Whirlpool Bath representative, at our option and in our sole discretion, we will either repair or replace the product with a Jacuzzi Whirlpool Bath product of the same or similar type and size; provided, however, that we will not pay any costs (labor or otherwise) associated with either removing a previously installed product; installing a replacement product; or transportation or return of a product.

JACUZZI WHIRLPOOL BATH WILL NOT BE LIABLE FOR ANY OTHER LOSS OR EXPENSE(S) NOT SPECIFICALLY DESCRIBED ABOVE, AND DISCLAIMS ANY LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.