


DRAIN ALIGNMENT KIT

FOR ALL FREESTANDING BATHS

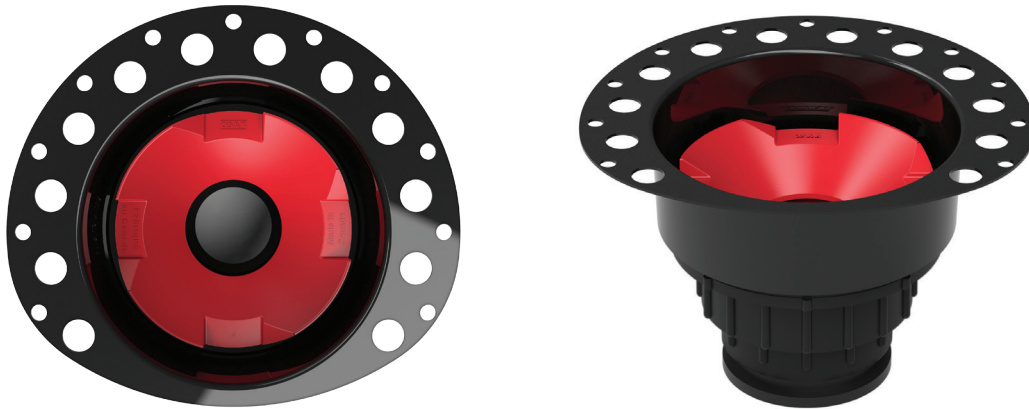

Part No. MZ20000



- Makes freestanding bathtub installation easier
- Will fit an 8" joist
- Video tutorial on how to use on YouTube Jacuzzi® Official
- Can be purchased separately for use with all freestanding baths

For more information go to www.jacuzzi.com/baths or call 1-800-288-4002