



SHOWER SHELF INSTALLATION INSTRUCTIONS

Jacuzzi Model #

Questions, problems, missing parts? Before returning to your retailer, call our customer service department at 1-800-288-4002, 9 a.m. - 8 p.m., EST, Monday - Friday

20" Shelf: PP58827 (CH), PP58826 (BN), PP58817 (MB)


30" Shelf: PP57827 (CH), PP57826 (BN), PP58817 (MB)

PLEASE READ THESE INSTALLATION INSTRUCTIONS THOROUGHLY PRIOR TO INSTALLING THIS SHOWER SHELF

IMPORTANT: THIS PRODUCT SHOULD ONLY BE INSTALLED BY QUALIFIED AND TRAINED PERSONNEL

FAILURE TO FOLLOW THESE INSTRUCTIONS COULD LEAD TO IMPROPER INSTALLATION OF THE SHOWER SHELF, STRUCTURAL AND/OR WATER DAMAGE TO THE WALL AND IN-WALL SUPPORT STRUCTURES, AND/OR SERIOUS BODILY INJURY IN USE. IN ADDITION, ALL WARRANTIES, EXPRESS OR IMPLIED, WILL BE NULL & VOID DUE TO IMPROPER INSTALLATION OF THIS PRODUCT. THE MANUFACTURER DOES NOT ASSUME ANY LIABILITY FOR DAMAGE RESULTING FROM SERVICES PERFORMED BY OTHERS, OR FAULTY INSTALLATION, MISUSE OR MISAPPLICATION OF GOODS.

TO ASSURE PROPER AND SAFE INSTALLATION, THIS SHOWER SHELF MUST BE INSTALLED INTO A MINIMUM 2" THICK SOLID WOOD IN-WALL BACKING MATERIAL. MAKE CERTAIN IN-WALL BACKING COMPLIES WITH ALL LOCAL BUILDING CODE REQUIREMENTS.

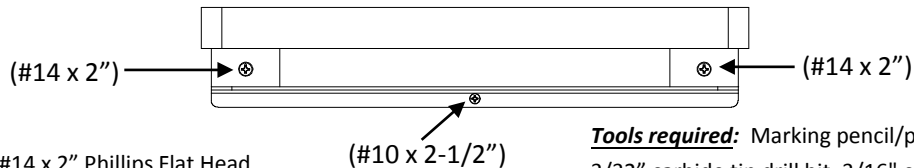

Hardware Provided: (4) #14 x 2" Phillips Flat Head Screws, (1) #10 x 2-1/2" Phillips Pan Head Screw

Tools required: Marking pencil/pen, level, power drill, 3/32" carbide tip drill bit, 3/16" carbide tip drill bit #2 Phillips driver, silicone.

STEP #1 LOCATING

- Remove Shower Shelf from package.
- Locate the area with 2" solid wood in-wall backing on the desired mounting surface.
- Place the shelf in position on the wall. Using a level (not provided) ensure the shelf is level and pencil-mark the location of the mounting holes on the wall.
- Using a pencil or suitable marker, it is **extremely important** you mark the center of each of the five (5) mounting holes precisely on the mounting surface.

Proceed cautiously through the following steps in this installation process to avoid drilling into in-wall water supply lines. All mounting points must fasten into structural wood backing, minimum 2" thickness. Avoid electrical and/or plumbing behind the wall, and where possible drill through tile - not through grout.

STEP #2 MOUNTING

FIG 2.1

Use a power drill with a 3/16" carbide tip drill bit (not provided) and drill at the four (4) locations indicated in Fig 2.1

FIG 2.1

Use a power drill with a 3/32" carbide tip drill bit (not provided) and drill at the final location indicated in Fig 2.2

MOUNTING

Apply a bead of silicone around the entire edge of the Shower Shelf mounting surface and inside each of the pre-drilled holes to ensure a water-tight seal will be created at all mounting locations. Secure the Shower Shelf to the wall using the indicated screws (included) in Fig 2.3 and screw into the pre-drilled holes created in the solid wood backing.

