


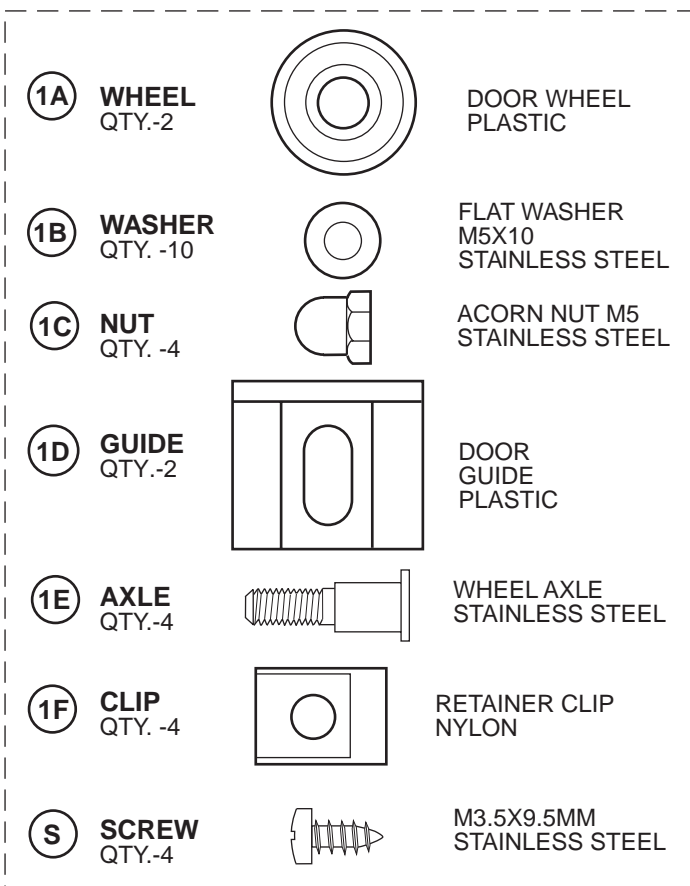

ADDENDUM CORNER TOWER DOOR

- 1.. Locate the sliding door and roller hardware. The bottom of the sliding door has a rounded edge. Attach the top rollers so they are positioned in the middle of the slots. Tighten the acorn nut. (See Illustration 1.) Assemble the bottom guides with axle and two washers. Slide assemblies into bottom rail. (See Illustration 2.)
- 2.. Place the top rollers of the sliding door into the top ring roller track. Pivot the door bottom toward the bottom rail. Position the axles through the slots. Tighten the acorn nuts. (See Illustration 2.)
3. . Locate the retainer extrusion. Slide it between the door and top track. Align the joint of the retainer extrusion with the top ring joint. The extrusion should cover the entire inside diameter of the top ring. Secure the retainer extrusion with the retainer clips. Drill four (4) 3/32" diameter holes at 90° intervals. Use the retainer clips as a drill guide. (See Illustration 3.)



POSITION ROLLERS IN TRACKS

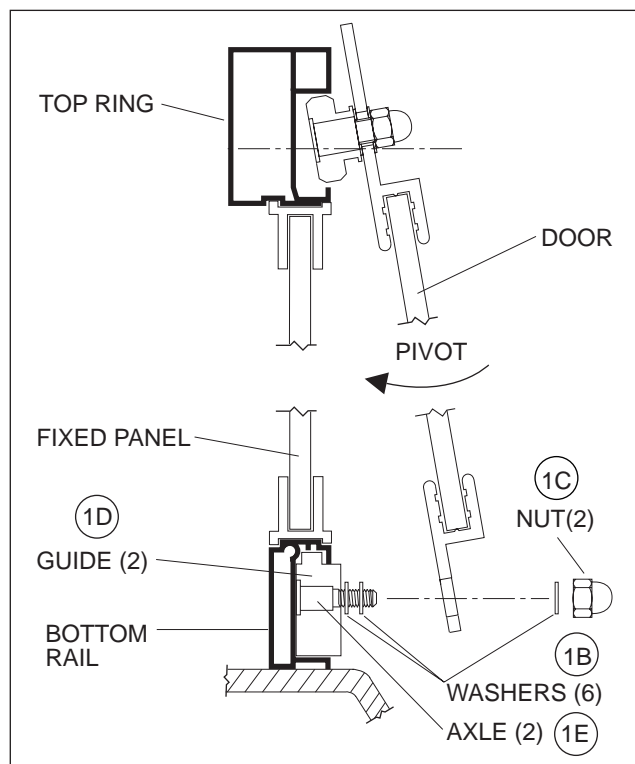


ILLUSTRATION 2

LOCATE TOP TRACK RETAINER EXTRUSION

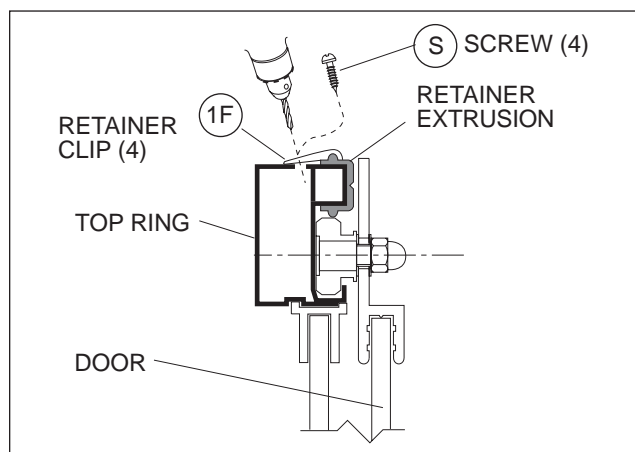


ILLUSTRATION 3

ATTACH ROLLERS TO SLIDING DOOR


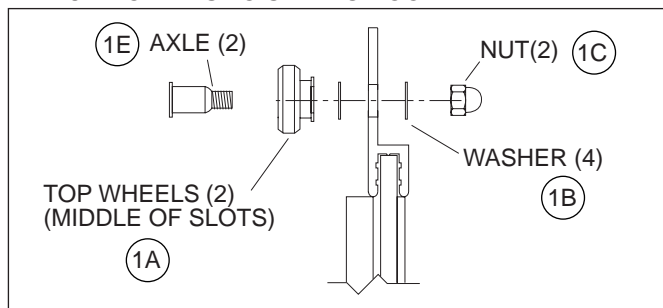


ILLUSTRATION 1

4. After alignment, the door stop should be attached. Slowly rotate the door to the closed position. The vertical edges of the fixed frame and sliding door should engage. Slide the door back 1/4" and attach the door stop by drilling a 3/32" hole through the plastic extrusion and secure a plastic retainer to the retainer extrusion. (See Illustration 4.)
5. Attach the handle to the inside of the sliding glass door. (See Illustration 5.)

IMPORTANT: HANDLE MUST BE MOUNTED TO **INSIDE OF GLASS DOOR TO AVOID STRIKING FRAME AND SHATTERING THE GLASS.**

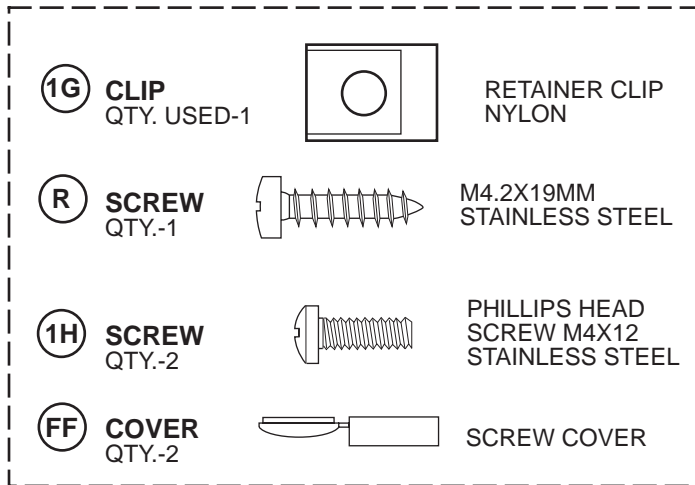

ATTACHING HANDLE TO INSIDE OF DOOR

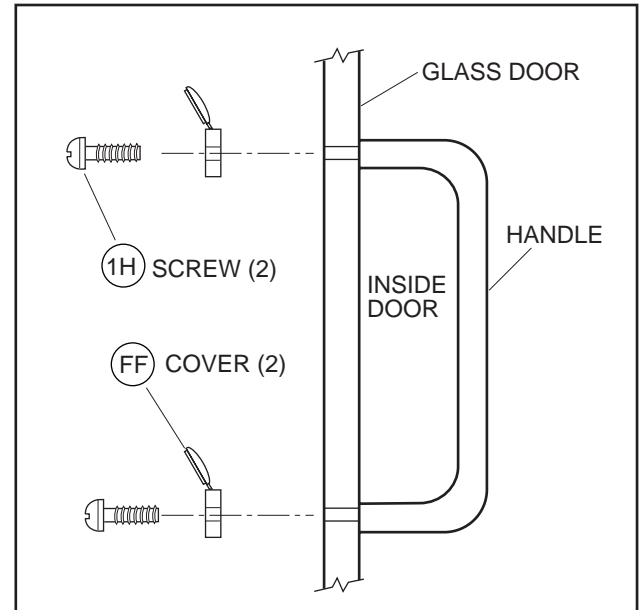


ILLUSTRATION 5

ATTACHING DOOR STOP

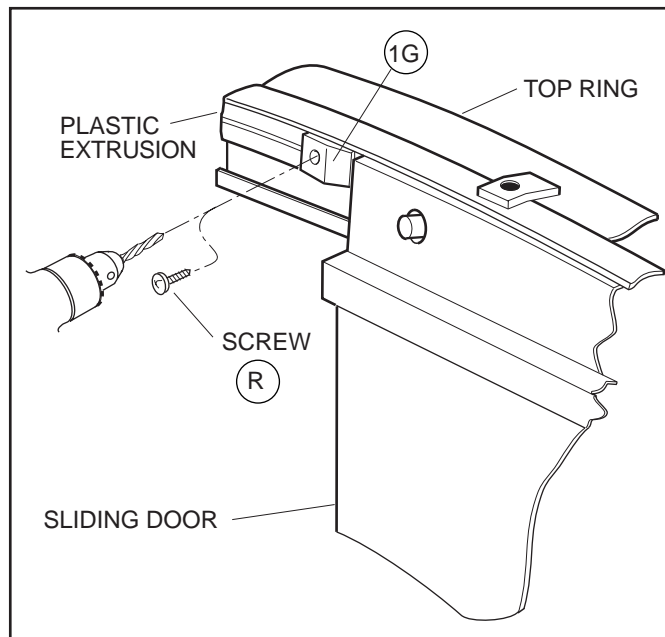


ILLUSTRATION 4

Jacuzzi Whirlpool Bath
P.O. Box 702168, Dallas, TX 75370-2168
Service Support: Call (800) 288-4002

©1997 Jacuzzi Whirlpool Bath M272000 8/16/04