


BIDET INSTALLATION

1. It is recommended to install the faucet and waste assembly on the bidet prior to installation.
2. By using the rough-in dimensions, place bidet in proper position. Install two lag bolts through holes in bidet base as shown below.
3. Be careful not to overtighten the mounting lag bolts since it could crack the china.
4. Install bolt caps provided.

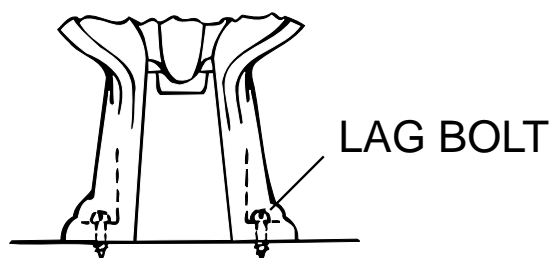

BACK VIEW